

## RC6500 Installation and operating instructions

The KR19A keychain remote turns on and off a light or appliance plugged into the TM751 Transceiver. It also lets you turn on and off two individually coded X10 Modules and brighten and dim lights connected to Lamp Modules and Wall Switch Modules (sold separately). The top two ON-OFF buttons control the TM751 as well as X10 Modules set to A1. The middle two buttons control X10 Modules set to A2. You can easily change the buttons to control any two consecutive Modules. The KR19A is normally set to Housecode A, but you can easily change it to any letter between A and P.

1. Plug in the TM751 Transceiver and connect a light or appliance to it (observe ratings on back).
2. To turn the TM751 on or off, or any X10 Modules set to Unit Code 1, (on Housecode A) press the first (top) ON or OFF button. To turn on or off X10 Modules set to Unit Code 2 (on Housecode A) press the second (bottom) ON or OFF button. To brighten or dim Lamp Modules or Wall Switch Modules press the number button first, then press Bright or Dim button. If you want to control Modules 1 and 2 on Housecode A, that's it. You don't need to read any further.

### If you want to change the Housecode:


- Press and hold the first (top) **ON** button. The red LED blinks once. 3 seconds later, the LED blinks the current setting: 1 blink for Housecode A, 2 blinks for B..... 16 blinks for P.
- Release the first (top) **ON** button.
- Press and release the first (top) **ON** button the appropriate number of times for the Housecode you want to set. Once for A, twice for B, etc. The LED blinks for each press. **IMPORTANT:** Hold the button on your last press. 3 seconds later, the red LED blinks back the new setting, e.g. 3 blinks for Housecode C. If you do not follow this programming sequence, the LED will stay on for 1 second and your existing setting will not be changed.

**If you want to change the Unit Code for the top two buttons**(the second pair of buttons are always one # higher than the top pair, i.e. if you set the top button to 6, the second button controls 7, etc.).

- Press and hold the top **OFF** button. The red LED blinks once. 3 seconds later, the LED blinks the current setting: 1 blink for Unit Code 1, 2 blinks for 2, 16 blinks for 16.
- Release the top **OFF** button.
- Press and release the top **OFF** button the appropriate number of times for the Unit Code you want. **IMPORTANT:** Hold the button on your last press. 3 seconds later new code blinks back. If you do not follow this programming sequence, the LED will stay on for 1 second and your existing setting will not be changed.

**To change the battery:** Pry the unit apart and fit a CR2025 Lithium 3V battery. Observe polarity.

**F.C.C. CAUTION - THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION. NOTE: NO CHANGES OR MODIFICATIONS MAY BE MADE TO THE UNITS. ANY CHANGES MADE TO THE UNITS WILL VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

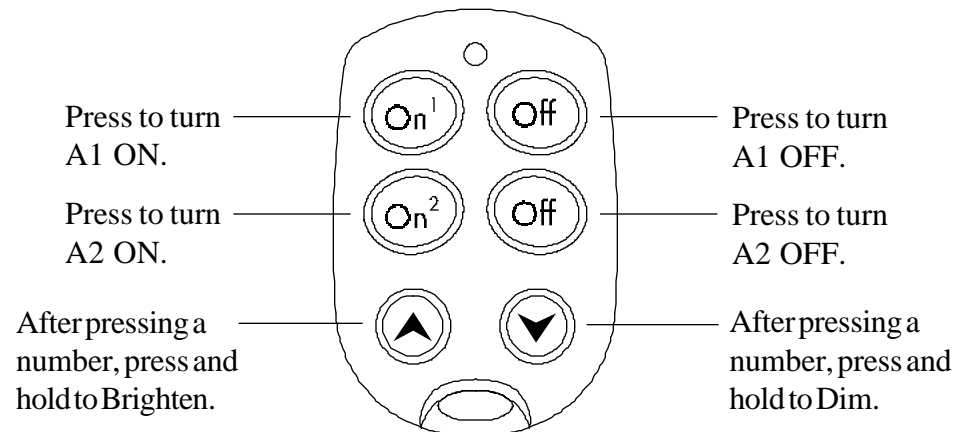

## X10 Wireless Technology, Inc. Limited One Year Warranty

X10.com, a division of X10 Wireless Technology, Inc. (X10) warrants X10 products to be free from defective material and workmanship for a period of one (1) year from the original date of purchase at retail. X10 agrees to repair or replace, at its sole discretion, a defective X10 product if returned to X10 within the warranty period and with proof of purchase. If service is required under this warranty:

Call 1-800-442-5065, visit [www.x10.com](http://www.x10.com), or e-mail [support@x10.com](mailto:support@x10.com).

**For help or more information on setup, please visit:**

**<http://www.x10.com/support>**