



WWW.  .COM[®]

UR24A
8-IN-1
LEARNING
SUPERREMOTE

OWNER'S MANUAL





— READ THIS FIRST! —

SAFETY CONSIDERATIONS

Remember to exercise good common sense when using your X10 remote's home automation features - especially when scheduling unattended devices. There can be some unexpected consequences if not used with care. For example, an empty coffee pot can be remotely turned on. If that should happen, your coffee pot could be damaged from overheating. If an electric heater is turned on by remote control while clothing is draped over it, a fire could result. **DO NOT USE** the system for the control of high power heating appliances such as portable heaters.

Caution: To reduce the risk of electric shock, do not disassemble any part of the Home Automation System. No user-serviceable parts are inside. If you spill liquid on a unit, disconnect the unit from the AC outlet to prevent possible fire or shock hazard and consult authorized service personnel.

Powerline operated equipment or accessories connected to any of these units should bear the UL listing or CSA certification mark and should not have been modified in any way that might defeat their safety features.

Warning: To prevent electric shock hazard, do not expose any part of the Home Automation System to rain or moisture.

FCC CAUTION

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

This equipment generates and uses radio frequency energy, and if not installed and used properly, that is, in strict accordance with the manufacturers instructions, it may cause interference to radio and television reception. It has been type tested and found to comply with the limits for remote control devices in accordance with the specifications in Sub-Parts B and C of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by unplugging the equipment, try to correct the interference by one or more of the following measures.

- Reorient the antenna of the radio/TV experiencing the interference.
- Relocate the interface with respect to the radio/TV.
- Move the interface away from the radio/TV.
- Plug the interface into an outlet on a different electrical circuit from the radio/TV experiencing the interference.
- If necessary, consult your local Dealer for additional suggestions.

NOTE: Modifications to any of the components in this kit will void the user's authority to operate this equipment.





CONTENTS

INTRODUCTION	5
GETTING STARTED	6
CONTROLLERS AND MODULES	6
HOUSE CODES AND UNIT CODES	7
INSTALLING THE COMPONENTS	8
TRANSCIVER MODULE	8
LAMP MODULE	8
8-IN-1 SUPERREMOTE	9
SETTING UP YOUR SUPERREMOTE	10
BUTTON DESCRIPTIONS	10
CLEARING THE MEMORY	12
SETTING UP FOR TV, VCR, CABLE BOX AND SATELLITE RECEIVER	14
USING AUX TO CONTROL A SECOND TV, VCR, CABLE BOX OR SATELLITE RECEIVER	24
SEARCHING FOR CODES	26
IDENTIFYING CODES FOUND USING THE SEARCH PROCEDURE	27
SETTING THE SLEEP TIMER	28
LEARNING	29
CONTROLLING X10 MODULES	32
TO SET THE X10 SLEEP TIMER	32
CHANGING THE X10 HOUSE CODE:	33
CONTROLLING AN IR MINI CONTROLLER	35
EXPANDING YOUR SYSTEM	36
TROUBLESHOOTING	38
WARRANTY	39

INTRODUCTION

Congratulations on your purchase of the X10 SuperRemote.

Make your lights and appliances go to work for you....

The X10 SuperRemote will control most or all of your video and audio equipment. But what really sets it apart from other remotes is that you can also control almost any light or appliance in your home - even in another room! And it's easy to install. Within minutes, you can be using your X10 SuperRemote to dim the lights, start brewing a fresh pot of coffee and play your favorite movie!*

Here are just some of the things you can do with your X10 SuperRemote...

- Control your entire audio/video and lighting setup for the ultimate Home Theater experience.
- Turn on lights at night to scare away intruders if you hear a noise.
- Start the coffee from your bedroom when you wake up.
- Turn on your electric blanket before the movie ends, so you it's nice and warm when you go to bed.

Use this manual to become familiar with your SuperRemote....

This manual will explain how to set up your SuperRemote to use it with your existing Audio/Video equipment.

Next it will show you how you can use it to set up and use an X10 Transceiver Module and Lamp Module (sold separately) to operate electrical devices in your home.

Finally, the manual will show you can expand your system with some of the many additional X10 products you can purchase.

* Requires X10 modules, sold separately.



GETTING STARTED

Because we know that you are eager to get started, we've kept this introduction as short as possible, but it contains very valuable information, so you should read through it very carefully.

CONTROLLERS AND MODULES

The first thing you need to understand is that there are two different devices you need to control your house; Controllers and Modules.

Any light or appliance that you want to control is plugged into a Module and that Module is then plugged into a standard AC outlet.

Modules receive commands from Controllers. Examples include the Lamp Module (sold separately). The Transceiver Module (also sold separately) is another example (although it also doubles as a controller as described later).

 
Controllers are plugged into standard wall outlets and send commands to Modules over your existing electrical wiring in your house without affecting your electricity in any way.

The Transceiver Module works as a controller when it is used with a remote control such as the 8-in-1 Learning SuperRemote. When the Transceiver Module receives a command from the remote it sends digital signals over your existing house wiring to a Module which receives the signals and executes the command.

The remote uses radio frequency (RF) signals to send commands to the Transceiver Module. RF signals can go right through walls, so you can use the remote to control lights or appliances from anywhere in your home.



HOUSE CODES AND UNIT CODES

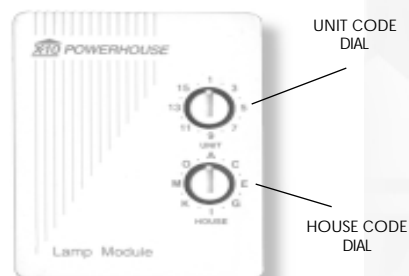

Each Module has a specific address made up of a House Code (red dial on the face of the Module) and a Unit Code (black dial on the face of the Module).

The Controller first sends an address and then a command on the AC power lines. Only the Module with a matching address will execute the command. If more than one Module has the same address, both Modules will execute the command.

Addresses are set on the Module by turning the two dials on the front of the Module to the desired letter and number (using a small screwdriver or a coin). The House Code is selected from the letters A through P, and the Unit Code is selected from the numbers 1 through 16.





INSTALLING THE COMPONENTS

TRANSCIVER MODULE

The Transceiver Module receives radio frequency (RF) commands from remotes to operate a lamp or appliance plugged into it. The Transceiver Module also passes on commands over your house wiring to control other X10 Modules. Note that unlike the Lamp Module you cannot dim and brighten a lamp connected to the Transceiver Module.

You should locate the Transceiver Module centrally in the home for maximum range when controlled by the X10 Learning SuperRemote.

1. Set the House Code to 'A' .



2. Plug a lamp or appliance into the Transceiver Module.



3. Plug the Transceiver Module into a convenient AC outlet. Fully extend the antenna.



LAMP MODULE

The Lamp Module may be used to control any incandescent lamp rated up to 300W. It is not suitable for other types of lamp such as fluorescent or energy saving lamps, or lamps which include a dimmer control.

Caution: Do not connect an appliance such as a coffee pot or heater to the Lamp Module. It may damage the module and the appliance and could cause a fire hazard.

1. Set the House Code to 'A' and the Unit Code to '2.'



2. Plug a lamp into the Lamp Module.



3. Plug the Lamp Module into a convenient AC outlet.



8-IN-1 LEARNING SUPERREMOTE

The 8-in-1 Learning SuperRemote allows you to control practically everything electrical in your home. It combines IR technology that lets you control all your TV, VCR, Cable and Satellite equipment with X10 RF technology that lets you control lamps and appliances anywhere in your home.

To find out more about configuring the Learning SuperRemote to work with your audio/video equipment, see the section titled "Setting Up your SuperRemote."

1. Push the tab and lift off the battery cover.



2. Fit four AAA batteries, taking care to match the + and - marks in the battery compartment.





SETTING UP YOUR SUPERREMOTE

BUTTON DESCRIPTIONS

INDICATOR LIGHT

The indicator light flashes when the remote is operating.

POWER

Works in the same way as your original remote.

SET UP

Used for programming the remote.

BACKLIGHT

Lights up the keys for a few seconds when pressed.

LEARN

Lets you learn codes from an existing remote, that might not be in the Learning SuperRemote's library.

X10

Lets you control X10 Modules to operate lamps and appliances around the home.

TV, VCR, CBL, CD, AUX1, AUX2, SAT

Used to select the device to control. SAT includes DSS receivers.

SHIFT

Lets you learn another function under the same key

0-9

Used as your original remote and to enter device codes.

LAST

Selects the last channel viewed on your TV, VCR, Cable Box or Satellite Receiver.

CHANNEL

Works like your original remote. Also used to turn X10 Modules on and off.

MUTE

Works the same as your original remote.

VOLUME

Works like your original remote. Also used to brighten and dim lamps connected to X10 Modules.

TIMER

Used to set the Sleep Timer to automatically switch off the TV or X10 Modules after a preset time.

L1, L2

Lets you learn additional keys from your original remote.

DISP

Used to access on-screen information or CD programming.

PLAY, REW, FF, STOP

Work the same as on your original VCR remote.

SELECT

Used for menu selections on DSS satellite receivers.

GUIDE

Displays the main menu on DSS satellite receivers.

REC

Record button. Works the same as your original VCR remote. You must press the REC button twice to begin recording.

PAUSE

Works the same as your original VCR remote.





 
CLEARING THE MEMORY

It is recommended that you clear the memory in the Learning SuperRemote before you start programming it:

1. Press and hold **SETUP** until the LED indicator lights steadily. Release the **SETUP** button.



2. Press and release the **LEARN** key **twice**.

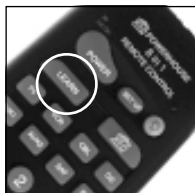

3. Press and release the **SETUP** key.



You can also clear the memory for just a particular mode (TV, VCR, etc.).

1. Press and hold **SETUP** until the LED indicator lights steadily. Release the **SETUP** button.



2. Press and release the desired mode button (TV, VCR, etc.). The LED blinks once.



3. Press the **LEARN** key. The LED blinks once.



4. Press **SETUP**. The LED turns off after a few seconds.



SETTING UP FOR TV, VCR, CABLE, CD, AND SATELLITE RECEIVER

1. Turn on the device you want to control (TV, VCR, cable box, satellite receiver etc.).



 
2. Press and hold SETUP until the LED indicator lights steadily. Release the SETUP button.



3. Press and release the mode button that matches the device you want to control. The LED blinks once. Use AUX for audio equipment.



4. Enter the 3 digit Code from the Library Code Tables. The LED turns off after the last digit entered.

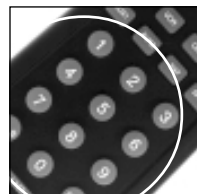

5. Point the remote at the device and press the POWER button. Your device should turn off.



6. Turn your device on and press CH +. If the device responds, setup is complete.



Notes:

For CD equipment use the AUX button.

If your TV/VCR/Cable Box/Satellite Receiver does not respond, try the other codes for your

brand. If it still doesn't respond, try the Code Search method on page 26.

If the LED blinks rapidly when you enter the code, you may have entered an invalid code. Recheck the code in the code list and try again.

If some buttons do not operate your equipment, try one of the other codes for your brand.

TV CODES

ABEX	185
ACME	003
ADA	016
ADC	012,096
ADMIRAL	014,186
ADVENTURA	187
AIKO	029
ALLERON	059
AMTRON	051
AKAI	015
AMSTRAD	202
ANAM NATIONAL	016,051,055,205,206,207
AOC	017,018,020,022,188,189,208
AUDIOVOX	051
.....
BELCOR	017
BELL & HOWELL	014,062,096
BRADFORD	051
BROKWOOD	017
.....
CANDLE	017,021,022,187
CAPEHART	188
CELEBRITY	015
CENTURION	022
CETRONIC	055
CITIZEN	017,021,022,029,051
.....	055,084,118,184,187,190
CLAIRTONE	189
CLASSIC	055
COLORTYME	017,022,023,213
CONCERTO	017,022
CONTEC/CONY	024,025,026,027,051,055,189
CRAIG	051,055
CROWN	051,055,184
CURTIS MATHES	013,017,022,028
.....	062,084,118,184
CXC	051,055
.....
DAEWOO	017,018,022,029,030
.....	031,055,098,139,140,184
DAYTRON	017,022,184
DIMENSIA	013
DUMONT	017,164
DYNASTY	055
DYNATECH	191
.....
ELECTROBAND	015,189
ELECTROHOME	016,017,022,034,035
EMERSON	017,022,025,027,036,037,038,039
.....	040,043,044,045,046,047,048,049,050
.....	051,052,053,054,055,056,057,058,059
.....	060,062,136,137,176,184,189,190,192,210
ENVISION	017,022
.....
FISHER	062,063,064,193
FUJITSO	059



FUNAI	051,055,059
FUTURETEC	051,055
GE	013,016,017,022,035,065,067,068
.....	100,176,177,178,179,180,181,194
GIBRALTER	017,164
GOLDSTAR	017,018,022,025,069
.....	070,071,168,169,184,185
GRUNDY	051,059,184
HALLMARK	017,022
HARVARD	051
HITACHI	017,022,024,025,026,072,073
.....	074,100,150,151,152,153,154,155
.....	156,157,158,159,160,161,163,192,211,212
IMA	051
INFINITY	075
JANEIL	187
JBL	075
JCB	015
JC PENNY	013,017,018,021,022,035,065
.....	067,071,076,077,084,100,118
.....	141,184,185,194,214
JENSEN	017,022
JVC	024,025,026,067,073,078
.....	079,080,102,171,172,195
KAWASHO	015,017,022
KAYPANI	188
KEC	055
KENWOOD	017,022
KLOSS NOVABEAM	081,082,187,196
KTV	051,055,083,184,189,190
LODGENET	096
LOEWE	075
LOGIK	096
LUXMAN	017,022
LXI	013,022,062,075,084,194
MEGATRON	022,072
MAGNAVOX	017,021,022,075,081,082
.....	087,088,089,090,101,102
.....	143,144,145,146,147,196,197
MAJESTIC	096
MARANTS	075
MARANTZ	017,022,075,091
MATSUI	075
MEI	189
MEMOREX	014,022,062,095,096
MGA	017,018,022,034,035
.....	059,064,092,093,095
MIDLAND	067,164,184,185,194
MINUTZ	065
MINUTZ	017,018,022,034,035,059
.....	064,092,093,094,095,102,138
MONTGOMERY WARD	096
MOTOROLA	016,186
MTC	017,018,022,084,118,189,191
MULTITECH	051,191
MULTIVISION	097
NAD	022,084,198
NEC	016,017,018,022,098,102,108,213
NIKEI	055
NIKKO	022,029
NTC	029
ONKING	055
ONWA	051,055

OPTIMUS	198
OPTONICA	108,186
ORION	048
PANASONIC	016,067,075,183
PHILCO	016,017,018,021,022,025
.....	075,081,082,087,088,090,196,197
PHILIPS	016,017,019,021,022,025,075,081
.....	082,087,088,089,099,100,101,102
PILOT	017,184
PIONEER	017,022,103,104,105,192,198
PORTLAND	017,018,022,029,184
PRICE CLUB	118
PRISM	067
PROSCAN	013,194
PROTON	017,022,025,106,188,199
PULSAR	164
PULSER	017
QUASAR	016,067,083,107
RADIO SHACK/REALISTIC	013,017,022,024,025
.....	051,054,055,062,108,184,185
RCA	013,016,017,018,020,022,109,111,112
.....	113,114,115,116,142,192,194,200,201
RHAPSODY	189
RUNCO	164
SAMPO	017,022,184,185,188
SAMSUNG	017,018,022,024,025,028
.....	084,117,118,119,184,185,214,217
SAMSUX	184
SANYO	017,062,063,093,120,121,182,193
SCOTCH	022
SCOTT	017,022,025,037,048,051,055,059
SEARS	013,017,022,026,059,062,063,064
.....	079,084,118,122,123,193,194,202,210
SHARP	017,022,025,108,124,125
.....	126,127,135,184,186
SHOGUN	017
SIGNATURE	014,096,128
SIMPSON	021
SONIC	189
SONY	015,019
SOUNDESIGN	017,021,022,051,055,059
SQUAREVIEW	202
SSS	017,051,055
STARLITE	051
SUPRE-MACY	187
SUPREME	015
SYLVANIA	017,021,022,075,081
.....	082,087,088,089,090
.....	101,129,174,196,197
SYMPHONIC	046,051,202
TANDY	186
TATUNG	016,191
TECHNICS	067
TECHWOOD	017,022,067
TEKNIKA	017,018,021,022,025,026
.....	029,051,055,059,084,089
.....	095,096,118,183,184,187
TELECATION	130
TELERENT	096
TERA	199
TMK	017,022
TOSHIBA	062,084,102,118
.....	122,130,131,173,214
TOTEVISION	184



UNIVERSAL	065,100
VICTOR	079,195
VIDTECH	017,018,022
VIKING	187
WARDS	013,014,017,018,022,037,046
.....	059,065,075,081,082,087,088
.....	089,096,100,101,108,132,133,197
YAMAHA	017,018,022
YUPITERU	055
ZENITH	096,134,164,165,166,167

VCR CODES

ADMIRAL	014
ADVENTURA	039
AIKO	040
AIWA	015,039
AKAI	016,017,018,019,020
.....	021,124,125,126
AMERICAN HIGH	034
ASHA	026
AUDIO DYNAMICS	022,023
AUDIOVOX	027
BELL & HOWELL	024
BEAUMARK	026
BROKSONIC	025,038
CALIX	027
CANDLE	026,027,028,029,030,031,032
CANON	034,035,127
CAPEHART	033,123
CARVER	075
CCE	040,074
CITIZEN	026,027,028,029
.....	030,031,032,040
COLORTYME	022
COLT	074
CRAIG	026,027,036,074
CURTIS-MATHES	013,015,022,026
.....	029,031,034,035
CYBERNEX	026
DAEWOO	028,030,032,038,039
.....	040,041,123,143
DAYTRON	123
DBX	022,023
DIMENSIA	013
DYNATECH	015,039
ELECTROHOME	027,042
ELECTROPHONIC	027
EMERSON	015,019,025,027,028,034,037
.....	038,039,042,043,044,045,046
.....	047,048,049,050,051,052,053
.....	054,055,056,057,058,059,060
.....	078,118,126,129,130
FISHER	024,036,061,062,063,064,065,131
FUJI	034,132
FUNAI	015,039
GARRARD	039
GE	013,026,034,035,066,128,133
GOLDSTAR	022,027,031,067,134
GRADIENTE	039
HARLEY DAVIDSON	039
HARMAN KARDON	022,081

HARWOOD	074
HEADQUARTER	024
HITACHI	015,068,069,070,120,124,133,135
HI-Q	036
INSTANT REPLAY	034
JCL	034
JC PENNEY	022,023,024,026,027,034,035
.....	068,069,071,072,073,120,131
JENSEN	124
JVC	022,023,024,031,071,124,136
KENWOOD	022,023,024,029,031,071,124,136
KLH	074,144
KODAK	027,034
LLOYD	015,039
LOGIK	074
LXI	027
MAGNAVOX	034,035,075,076,117,121,137
MAGNIN	026
MARANTZ	022,023,024,029,031,034,071,075,077
MARTA	027
MASUSHITA	034
MEI	034
MEMOREX	014,015,024,026,027
.....	034,036,039,056,117
MGA	042,078,126
MGN TECHNOLOGY	026
MIDLAND	066
MINOLTA	068,069,120
MINOLTA	042,068,069,078,079
.....	080,081,082,083,084
.....	085,086,087,119,126,136
MONTGOMERY WARD	014,088
MOTOROLA	014,034
MTC	015,026,039
MULTITECH	015,026,039,066,074
NEC	022,023,024,029,031,071,077
.....	089,090,091,092,124,136
NIKKO	027
NOBLEX	026
OLYMPUS	034
OPTIMUS	014,027
OPTONICA	109,147
PANASONIC	034,035,122,138,139,140
PENTAX	029,068,069,029,120,133
PENTEX RESEARCH	031
PHILCO	034,035,075,076
PHILIPS	034,075,109,137
PILOT	027
PIONEER	023,068,093,094,136
PORTLAND	029,030,032,123
PROSCAN	013
PROTEC	074
PULSAR	117
QUARTER	024
QUARTZ	024
QUASAR	034,035,138
RCA	013,016,026,034,068,069,095
.....	096,097,098,099,100,101,102
.....	103,104,120,128,133,138
RADIOSHACK/REALISTIC	014,015,024,026,027
.....	034,035,036,039,042
.....	062,063,109
RADIX	027
RANDEX	027
RICOH	141





RUNCO	117
SAMSUNG	018,026,028,046,066,125
SANKY	014,117
SANSUI	023,105,124,136
SANYO	024,026,036
SCOTT	025,028,038,045
.....	051,078,106,129
SEARS	024,027,034,036,061
.....	062,063,064,068,069
.....	120,131
SHARP	014,015,030,042,107,108,109
SHINTOM	017,069,074,111,145
SHOGUN	026
SIGNATURE	015
SINGER	034,074
SONY	017,111,112,132,141
STS	034,120
SYLVANIA	015,034,035,039
.....	075,076,078,137
SYMPHONIC	015,039
TANDY	015,024
TASHIKO	027
TATUNG	071,124
TEAC	015,039,071,098,124
TECHNICS	034,122
TEKNIKA	015,027,034,113,142,039
TOSHIBA	028,062,064,068,078,106,129
TOTEVISION	026,027
TMK	026,037,060
UNITECH	026
.....	
VECTOR RESEARCH	022,023,028,029
VICTOR	023
VIDEO CONCEPTS	022,023,028,029,126
VIDEOSONIC	026
.....	
WARDS	014,015,026,027,028,034
.....	036,039,042,068,069,074
.....	109,114,115,116,120,129
XR-1000	034,039,074
YAMAHA	022,023,024,031,071,124
ZENITH	017,111,117,132,141

CABLE CODES

ABC	014,015,016,017,018,019,020
ANTRONIX	021,022
ARCHER	021,022,023,024
.....	
CABLETENNA	021
CABLEVIEW	021
CENTURY	024
CITIZEN	024
COLOUR VOICE	025,026
COMTRONICS	027,028
CONTEC	029
.....	
EASTERN	030
.....	
GARRARD	024
GC ELECTRONICS	022
GEMINI	031,032
GENERAL INSTRUMENT	016
.....	
HAMLIN	033,034,035,048
HITACHI	016
HYTEX	015
JASCO	024

JERROLD	014,016,018,020,031
.....	036,037,062,063
MAGNAVOX	038
MEMOREX	039
MOVIE TIME	015,040,041
.....	
NSC	015,040
.....	
OAK	015,029,042
.....	
PANASONIC	013,061,064
PARAGON	039
PHILIPS	024,025,026,032
.....	038,043,044,045
PIONEER	046,047
PULSAR	039
.....	
RADIO SHACK	058
RCA	013,060
REALISTIC	022
REGAL	035,048
REGENCY	030
REMBRANDT	016
RUNCO	039
.....	
SAMSUNG	027,047
SCIENTIFIC ATLANTA	019,049,050,051
.....	065,066,067
SIGNAL	027,031
SIGNATURE	016
SL MARX	027
SPRUCER	013
STANDARD COMPONENTS	052
STARCOM	014,020,031
STARGATE	027,031
STARQUEST	031
.....	
TANDY	053
TELEVIEW	027
TEXSCAN	052
TOCOM	017,036,054
TOSHIBA	039
TUSA	031
TV86	040
.....	
UNIKA	021,022,024
UNITED ARTISTS	015
UNITED CABLE	014
UNIVERSAL	021,022,023,024,055
.....	
VIDEOWAY	057
VIEWSTAR	028,038,040,053,056
.....	
ZENITH	039
.....	

SATELLITE CODES

AMPLICA	028
.....	
BIRDVIEW	029
.....	
CHANNEL MASTER	030,031,032
CHAPPARAL	013,014,033,034
CHEYENNE	014
.....	
DRAKE	015,016,037,038,039,040
DX ANTENNA	035,036
.....	





ECHOSTAR	041,042,043
FUJITSU	044,045
GENERAL INSTRUMENTS	017,018,019,046,047,048
JANEIL	049
JEROLD	050
KENWOOD	051
LUXOR	052
MACOM STATE	053
NORSTAT	054
REALISTIC	020,056,057
SCIENTIFIC ATLANTA	060
SIERRA I, II, III	014
STAR TRAK	061
STS	021,022,023,024,058,059
SUPER GUIDE	062
TOSHIBA	025,063
UNIDEN	026,064
VIDEO CIPHER II	027

DSS CODES

ECHOSPHERE	071
ECHOSTAR	071
DISH NETWORK	071
HUGHES SATELLITE	075
PANASONIC	069,072
PRIMESTAR	070
RCA	065
SONY	066
STAR SIGHT CABLE SERVICES	073
TOSHIBA	067,068,074

LASER DISC CODES

PIONEER	093
PROSCAN	146
RCA	146

CD CODES

ADC	013
ADCOM	014,067
AIWA	015,016
AKAI	068,090
AUDIO ALCHEMY	017
AUDIO TECHNICA	018
BSR	017
CALIFORNIA AUDIO LABS	069
CAPETRONIC	022

CARRERA	017
CARVER	019,020,021
CASIO	070
CURTIS MATHES	070
DENON	023,024
EMERSON	014,025,026
FISHER	020,027,028,029,030,071
GE	078
GENEXXA	025,026,031,072
GOLDSTAR	032,073
HARMON KARDON	033
HITACHI	031
INKEL	034
JC PENNEY	043,070
JVC	035
KENWOOD	027,036,037,038,080,081
KRELL	019
KYOCERA	013
LUXMAN	039,040,082,083,091
LXI	025,070
MAGNAVOX	019,084
MARANTZ	019,041,042,085
MCS	043,070
MGA	044
MISSION	019
MINIBISHI	044,045
NAD	074,092
NAKAMICHI	046,047
NEC	043
NIKKO	018,026,029
NSM	019
ONKYO	048,049,075
OPTIMUS	017,020,021,025,031
.....	037,050,051,052,053
PANASONIC	069,086,093
PHILIPS	019,084
PIONEER	031,054,055,072
PROTON	019
QUASAR	069
RCA	014,020,025,056,076
RCA Digital Video Disc	096
REALISTIC	014,020,022,025
.....	026,031,042,050,052
ROTEL	019
SAE	019
SAMSUNG	094
SANSUI	019,025,057,076,087
SANYO	020,058,071,088,095
SCOTT	014,025,026
SEARS	025,037,042,070
SHARP	037,042
SHERWOOD	034,042,051,059
SHURE	043





SONY	060,061
STS	013
SYLVANIA	019
SYMPHONIC	062
TEAC	029,042,052,062,063,064
TECHNICS	069,086,089
THETA DIGITAL	084
TOSHIBA	074
VECTOR RESEARCH	017,032
VICTOR	035
YAMAHA	018,065,066,077

HOME AUTOMATION CODES

X10 HOME AUTOMATION (RF)	013
X10 HOME AUTOMATION (IR543)	014
GE HOMEMINDER	015

USING AUX TO CONTROL A SECOND TV, VCR, CABLE BOX OR SATELLITE RECEIVER

The AUX button is normally used to control an audio component, but it can also be configured to control a second TV, VCR, cable box or satellite receiver.

 
1. Turn on the equipment you want to control.




2. Press and hold SETUP until the LED indicator lights steadily. Release Setup button.




3. Press either AUX button, then press the mode button that matches the equipment you want to control (TV, VCR, CBL, SAT).

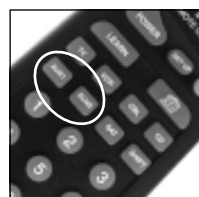

 4. Press and release the mode button that matches the A/V equipment you want to control. The LED blinks once.

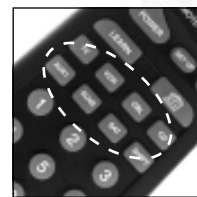

 
5. Enter the 3 digit Code from the Library Code Tables. The LED turns off after the last digit entered.

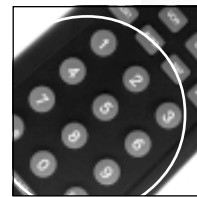

6. Point the remote at your audio component and press the POWER button. Your audio component should turn off.



 7. Turn your audio component on and press CH +. If it responds, setup is complete.

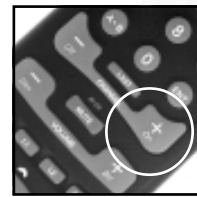

Notes:

If your audio/video component does not respond, try the other codes for your brand. If it still doesn't respond, try the Code Search method on page 26.

If the LED blinks rapidly when you enter the code, you may have entered an invalid code. Recheck the code in the code list and try again.





SEARCHING FOR CODES

1. Turn on the device you want to control.



 
2. Press and hold SETUP until the LED indicator lights steadily. Release Setup button.



3. Press the mode button that matches the equipment you want to control. The LED blinks once.




4. Press CH + repeatedly* until the device to be controlled changes channel.

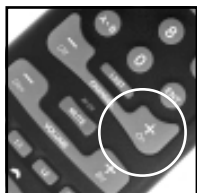

If you go past the code accidentally, just press LAST repeatedly until the channel changes again.



 5. Press and release the ENTER button to complete the setup.

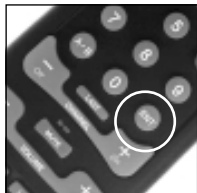

**Note: You may have to press CH + many times (50+). If the device does not have a Channel Up function, use the PLAY button (VCR only) or the POWER button.*

IDENTIFYING CODES FOUND USING THE SEARCH PROCEDURE

1. Press and hold SETUP until the LED indicator lights steadily. Release Setup button.



 
2. Press the mode button that matches the equipment you want to identify. The LED blinks once.




3. Press and release SETUP. The LED blinks once.




4. To find the first digit, press each number button from 0 to 9 until the LED blinks. The number you pressed is the first digit of the code.

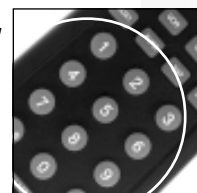

 5. Press each number button from 0 to 9 again as above to find the second digit.

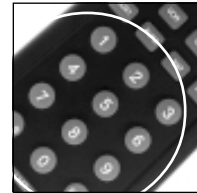

 6. Press each number button in turn to find the third digit. When the third digit has been found, the LED will go out.

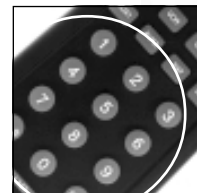




SETTING THE SLEEP TIMER

The Sleep Timer automatically turns off the TV after the time you set. Press the TV button, then follow the instructions below to set the Sleep Timer:


1. Press and hold **TIMER** until the LED indicator lights steadily. Release **TIMER** button.



 2. Use the number buttons to enter the sleep time required (1 to 99 minutes).

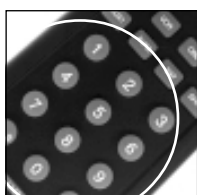

 3. Press **ENTER** to confirm the setting.

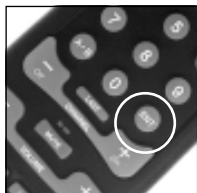

Note: Make sure you leave the remote pointing at the TV to ensure it turns off the TV at the time you set.



LEARNING

Your UR24A Learning SuperRemote has the codes for most TVs, VCRs, etc. in its code library. However, if the code for your particular device is not found in the library, you can learn these codes from your existing remote. Or if you find a code from the tables in this manual that "almost" matches your device, but a few buttons are missing, you can learn just those buttons.

1. Point your existing remote at the SuperRemote with a distance of about 2 inches between the remotes.



2. Press and hold **SETUP** until the LED indicator lights steadily. Release the Setup button.



3. Press the mode button that matches the equipment you want to learn. The LED blinks once.



4. Press and release the **LEARN** button. The LED blinks once.



5. Press and release the button on the SuperRemote that you want to teach. The LED blinks once. (Press shift first to learn a shifted function).



See notes on pages 30 and 31.



 


6. Press the button on your existing remote that you want to learn. Hold the button until the LED on the UR24A SuperRemote blinks off.



7. Repeat steps 5 and 6 for each button you want to learn.

8. When you've finished learning all the keys, press ENTER.

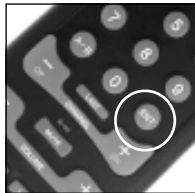

Notes:

Make sure you have fresh batteries in both remotes before learning.

Take care not to move either remote while pressing the buttons.

Experiment with the distance between the remotes if you have a problem learning.

Some remotes do not have their LED in the center so you might need to experiment with the side-to-side position of the remotes relative to each other.

Do not sit directly under an incandescent lamp while teaching the Learning SuperRemote.

In most cases you will hold the button on the remote you are learning from until the LED goes out on the Learning SuperRemote. In some cases however, you might find that the LED on the Learning SuperRemote doesn't go out until you release the key on the remote you are learning from.

Use buttons L1 and L2 to learn codes for which the Learning SuperRemote does not have a corresponding button.

If you have problems learning keys, try a Master Reset (Page 12) and then try learning them again.

You can learn up to 50 buttons each for three different remotes.

You cannot store any functions under the following keys:

Learn	AUX2	Shift VCR
Setup	X10	Shift Cable
TV	Timer	Shift SAT
VCR	Enter	Shift CD
Cable	Shift	Shift AUX1
SAT	Shift Learn	Shift AUX2
CD	Shift Setup	Shift X10
AUX1	Shift TV	Shift Timer

*You cannot **store** two products under the same key using shift, i.e. you can't enter the 3 digit code for a VCR and then press shift and enter another 3 digit code for another VCR. But you can **learn** a second product using SHIFT as follows.*

e.g. For two VCRs:

Press SETUP, VCR, then enter the 3 digit code for your first VCR (see page 14 for more details).

For VCR2:

Press SETUP, VCR, LEARN.

Then press SHIFT, then Play (on the UR24A) then Play (on the original VCR remote).

Then SHIFT, then Stop (on the UR24A) then Stop (on the original VCR remote), etc.

Then Enter.

Then to access each VCR:

Press VCR on the UR24A and the appropriate key on the UR24A to access the first VCR.

Press VCR and then Shift, and then the appropriate key to access the second VCR. You can keep pressing keys and you will stay in the "shifted mode" for about 10 seconds. You will time out of the shifted mode about 10 seconds after the last key is pressed.





 
CONTROLLING X10 MODULES

If you have already installed the Transceiver Module, you can control it and other X10 modules as follows:


1. Press and release the X10 button.



2. Use the number buttons to enter the Unit Code number of the chosen module. (You do not need to enter '0' first for a single digit number.)

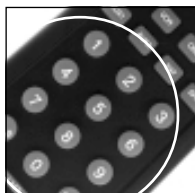

 3. Press the appropriate button for the function you require (see below).

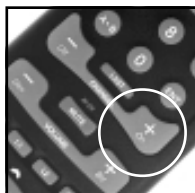

X10 FUNCTIONS:

On:	CHANNEL +
Off:	CHANNEL -
Bright:	VOLUME +
Dim:	VOLUME -
All Lights On:	POWER
All Modules Off:	MUTE

Note: You cannot dim or brighten an Appliance Module. If the module was off and you press Bright or Dim (VOLUME + or VOLUME-) this will simply turn the module on.

TO SET THE X10 SLEEP TIMER

The X10 Sleep Timer switches off the chosen modules after the preset time.

 
1. Press and release the X10 button.



2. Press and hold TIMER until the LED indicator lights steadily. Release TIMER button.




3. Use the number buttons to enter the module Unit Code for the module to be turned off.

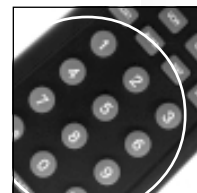

4. Press the desired function button (e.g. CH - to turn the module off after the preset time).



 5. Using the number buttons enter the sleep time required (1 to 99 mins).

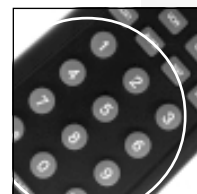

6. Press ENTER to confirm the setting.



CHANGING THE X10 HOUSE CODE:

The Learning SuperRemote defaults to House Code A, and in most cases you will not need to change this unless you are experiencing interference from a neighboring X10 system.

1. Press and release the X10 button.

 




2. Press and hold SETUP until the LED indicator lights steadily. Release the Setup button.



3. Use the number buttons to enter the number equivalent to the chosen House Code (1=A, 2=B ..16=P).

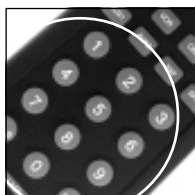

4. Press the ENTER button to confirm the House Code. The LED turns off.



Note: The Housecode you choose must match the Housecode on the Transceiver Module you are using it with.

CONTROLLING AN IR MINI CONTROLLER (IR543)

If you already own an IR Mini Controller, you will need to change the X10 Home Automation code in the remote to use it. The code for standard X10 Home Automation is 013. The code to control the IR mini controller is 014. To change the code:

 
1. Press and hold SETUP until the LED indicator lights steadily. Release the SETUP button.



2. Press and release the X10 button.



3. Enter 014 to control an IR Mini Controller, 013 for standard X10 control. The LED turns off after the last digit entered.

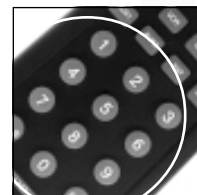

Note: In most cases, you will not need to use the IR Mini Controller to receive commands from the UR24A Learning SuperRemote - the Transceiver Module does this for you and has the added advantage of working through walls. You can't control the IR Mini Controller and the Transceiver Module at the same time.





EXPANDING YOUR SYSTEM

The products illustrated below represent just a few of the wide range of X10 compatible products you can choose from to expand your Home Automation system. They are available from electrical outlets, department stores and mail order catalogs.

 
 
X10 Home Automation products also integrate with X10 security systems, so you can use the security remotes that come with them to control macros and flash lights when the security system is tripped.

Check out our Web Site at:

www.x10.com


for more information on these and many other X10 products.

Use the **Mini Timer MT10A** to program up to 4 X-10 Modules to go on and off up to twice a day.

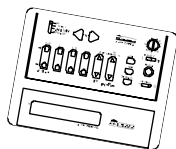

The **Dual Floodlight Motion Detector PR511** turns on at dusk and/or when it detects movement, and sends X10 signals to control other modules, or trigger ActiveHome macros.

 Fit a **Wireless Wall Switch SS13A/SS15A** anywhere you need an extra switch - with no wires. Sends commands to the Transceiver Module just like a remote.


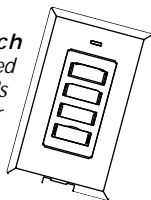


The **PowerFlash Module PF284** connects to dry contact or low voltage alarm terminals on your burglar alarm system and flashes X10 controlled lights when it is triggered.





Switch entrance or garage lights on from your car with the convenient **Keychain Remote KR21A**.

  Replace your existing wall switches with the **Wall Switch Module WS467**. Installs like a regular dimmer. On/Off and Bright/Dim functions. Other models available for 3-way and fluorescent lighting.

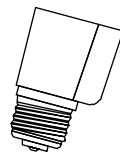


Control a ceiling light, closet light, etc. with the convenient **Screw-in Lamp Module LM15A**.

  Replace existing AC wall outlets with the **Receptacle Module SR227**. Has one 15A/1800W controlled outlet and one outlet which is always on.

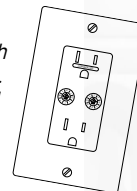

Use a controller to trigger the **Remote Chime Module SC546** to call Dad up for dinner, or warn people you're about to turn on the sprinklers.

 Use the isolated contacts on the **Universal Module UM506** to control pool pumps, sprinklers, drapes and other low voltage equipment. Includes built in warning beeper.

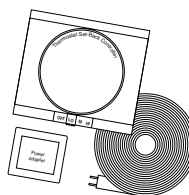

Use the **Thermostat Setback Controller TH2807** mounts below your thermostat to reduce the room temperature at night or at the times you set to save energy. No wiring needed to your existing thermostat.

Plug in a **Heavy Duty Module HD245** to control 220V appliances such as air conditioners and water heaters.



Also compatible with FireCracker Computer Interface. See www.x10.com for details.





— TROUBLESHOOTING —

The Transceiver Module doesn't respond to the remote:

- Check the House Code of the Transceiver Module is set to A. If you have changed the Housecode on the remote (see p. 33), check that it matches the Housecode on the module.
- Press the ON/OFF button on the front of the module to confirm it operates the equipment connected to it.

The Transceiver Module works, but other modules don't respond:

- Check that the module has the same Housecode as the Transceiver Module.
- Try plugging the module into a different outlet.

The Remote won't control your A/V equipment, or doesn't work at all:

- Use manual controls or the original remote control to confirm the equipment is working properly.
- Be sure you pressed the device key for the device you want to control.
- Re-enter the code for your A/V product from the code listings on pages 15 through 24.
- Replace the Remote's batteries.

For more help please visit:

www.x10.com/support

— WARRANTY —

12 MONTH LIMITED WARRANTY

X10.COM A DIV. OF X10 WIRELESS TECHNOLOGY, INC. (X10) WARRANTS ITS PRODUCTS TO BE FREE FROM DEFECTIVE MATERIAL AND WORKMANSHIP FOR A PERIOD OF ONE (1) YEAR FROM THE ORIGINAL DATE OF PURCHASE AT RETAIL. X10 AGREES TO REPAIR OR REPLACE, AT ITS SOLE DISCRETION, A DEFECTIVE X10 PRODUCT IF RETURNED TO X10 WITHIN THE WARRANTY PERIOD AND WITH PROOF OF PURCHASE.

IF SERVICE IS REQUIRED UNDER THIS WARRANTY:

1. CALL 1-800-675-3044, OR VISIT WWW.X10.COM, OR E-MAIL SALES@X10.COM TO OBTAIN A RETURN MERCHANDISE AUTHORIZATION (RMA) NUMBER.
2. RETURN THE DEFECTIVE UNIT POSTAGE PREPAID TO THE ADDRESS BELOW
3. ENCLOSE A CHECK FOR \$4.00 TO COVER HANDLING AND RETURN POSTAGE.
4. ENCLOSE A DATED PROOF OF PURCHASE.
5. X10 IS NOT RESPONSIBLE FOR SHIPPING DAMAGE. UNITS TO BE RETURNED SHOULD BE PACKED CAREFULLY.

THIS WARRANTY DOES NOT EXTEND TO ANY X10 PRODUCTS WHICH HAVE BEEN SUBJECT TO MISUSE, NEGLIGENCE, ACCIDENT, INCORRECT WIRING OR TO USE IN VIOLATION OF OPERATING INSTRUCTIONS FURNISHED BY US, NOR EXTEND TO ANY UNITS ALTERED OR REPAIRED FOR WARRANTY DEFECT BY ANYONE OTHER THAN X10. THIS WARRANTY DOES NOT COVER ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES AND IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED AND NO REPRESENTATIVE OR PERSON IS AUTHORIZED TO ASSUME FOR US ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF OUR PRODUCTS.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, AND/OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO THE ORIGINAL CUSTOMER. THIS WARRANTY GIVES YOU SPECIFIC RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

Visit www.x10.com/warranty to register on-line

**X10.com a division of
X10 Wireless Technology, Inc.
3824 North 5th St., Suite C,
North Las Vegas, NV 89032**

Web Site: www.x10.com





**X10.com a division of
X10 Wireless Technology, Inc.
3824 North 5th St., Suite C,
North Las Vegas, NV 89032**

Web Site: www.x10.com

Printed in China
DR-UR24A - 11/01

