

**TV Buddy™
Universal TV Remote
with Bottle Opener
and Corkscrew
Model UR41A**



INTRODUCTION

Your TV Buddy™ Universal TV Remote controls most all TV brands presently available. It also includes a handy bottle opener and corkscrew so you can enjoy a beer or a glass of wine while watching your favorite movie.

SET UP INSTRUCTIONS

Install 2 AAA alkaline batteries in the battery compartment on the back of the remote.

Look up the 3 digit code for your brand of TV from the Code Table and install it into the remote as follows:

2

Direct Library Code Entry

To enter Codes directly from Library Code Table.

1. Press and hold the Power and Mute buttons simultaneously until the red LED remains on.
2. Release the buttons.
3. Enter the 3 digit code for your brand of TV from the Library Code Table by using the V-, Ch+, and V+ buttons. Use the V- button to enter the first digit, use the Ch+ button to enter the second digit and use the V+ button to enter the third digit.
E.G. to enter code 013, don't press V-, press Ch+ once, and press V+ three times. The red LED blinks off with each keypress.
4. Press the Mute button to save the code.
Note: for a valid code, the red LED turns off. For an invalid code, the red LED blinks rapidly for three seconds before going off.
5. Direct code entry is now complete.

Write your code below in case you forget it.

<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------

3

Code Search Method

If you cannot find a 3 digit code in the Code Table that operates your TV, try searching for the code as follows:

1. Manually turn on the TV to be controlled.
2. Press and hold the Power and Mute buttons until the red LED remains on.
3. Release the buttons.
4. Press the Power button to begin code search.
5. Press the Channel Up (Ch+) button (or Power button) repeatedly until the TV changes channel (or turns off). You might have to press the button 100 times or more to find your code. If you accidentally overshoot the code required, press the Channel Down (Ch-) button, to backtrack through the code library until the TV changes channel.
6. Press Mute to save the code.
7. Code Search is now complete. Write down your code on the previous page.

Note: Code Search will start from the currently stored three digit number. E.G. if there are 100 codes in the library and the currently stored code is 050 then the Code Search will start from 051 continuing to 100 before looping back to 000 and finishing at 050.

Code Identification

To determine the code installed in the remote:

1. Press and hold Power and Mute at the same time until the red LED remains on.
2. Release the buttons.
3. Press and release the Channel Down (Ch-) button. The red LED blinks off once to indicate the keypress acceptance.
4. To find the first digit, press the V- button and count the red LED blinks. To find the second digit, press the Ch+ button and count the red LED blinks. To find the third digit, press the V+ button and count the red LED blinks. The red LED remains off after the last blink.
Note: No blink indicates a "0" digit.
5. Code Identification is now complete.

Note: If the remote accidentally gets stuck down the back of the couch with a button pressed it will stop transmitting after about 2 minutes so as not to drain the battery.

When changing batteries have the new batteries handy before removing the old ones. If the remote has no batteries installed for more than about a minute you will lose the installed code.

OPERATION

Press Power to turn your TV on and off.

Press Channel Up (Ch+) or Channel Down (Ch-) to change channels.

Press Volume Up (V+) and Volume Down (V-) to adjust the volume of your TV.

Press Mute to silence your TV.



6

Place back of bottle opener over bottle top and lift.

Screw corkscrew clockwise into top of wine bottle and pull.

Enjoy ☺



7

Code Table

Abex	185					
Acme	001					
Ada	017					
Adc	006	098				
Admiral	014	186				
Adventura	187					
Aiko	029					
Alleron	059					
Amtron	051					
Akai	015					
Amstrad	202					
Anam national	016	051	055	205	206	207
AOC	017	018	020	022	027	188
	208					
Audiovox	051					
Belcor	017					
Bell & Howell	014	062	096			
Bradford	051					
Brokwood	017					
Candle	017	021	022	187		
Capehart	188					
Celebrity	015					
Centurion	022					
Cetronic	055					
Citizen	017	021	022	029	051	055
	084	118	184	187	190	
Clairtone	027					
Classic	055					
Colorzyme	017	022	023	213		
Concerto	017	022				
Contec/Cony	024	026	027	051	055	184
Craig	051	055				
Crown	051	055	184			
Curtis Mathes	013	017	022	028	062	084
	118	184				

CXC

	051	055				
Daewoo	017	018	022	029	030	031
	055	098	139	140	184	
Daytron	017	022	184			
Dimensia	013					
Dumont	017	134				
Dynasty	055					
Dynatech	191					
Electroband	015	027				
Electrohome	016	017	018	022	035	
Emerson	017	022	027	036	037	038
	039	040	043	044	045	046
	047	048	049	050	051	052
	053	054	055	056	057	058
	059	062	136	137	176	184
	190	192	210			
Envision	017	022				
Fisher	026	062	064	193		
Fujitsu	059					
Funai	051	055	059			
Futuretec	051	055				
GE	013	016	017	022	035	065
	067	068	100	176	177	179
	180	194				
Gibraltar	017	134				
Goldstar	017	018	022	069	070	071
	168	169	184	185		
Grundy	051	059	184			
Hallmark	017	022				
Harvard	051					
Hitachi	017	022	024	026	072	073
	074	100	150	151	152	153
	154	155	156	157	158	159
	160	161	163	184	192	211
	212					

Ima	051					
Infinity	075					
Janeil	187					
JBL	075					
JCB	015					
JC Penny	013	017	018	021	022	035
	065	067	071	076	077	084
	100	118	141	184	185	194
	214					
Jensen	017	022				
JVC	024	026	067	073	078	079
	080	102	171	172	184	195
Kawasho	015	017	022			
Kaypani	188					
KEC	055					
Kenwood	017	022				
Kloss Novabeam	081	082	187			
KTV	027	051	055	083	184	190
Lodgenet	096					
Loewe	075					
Logik	096					
Luxman	017	022				
LXI	013	022	062	075	084	194
Megatron	022	072				
Magnavox	017	021	022	075	081	082
	087	088	089	090	101	102
	143	145	146	197		
Majestic	096					
Marants	075					
Marantz	017	022	075	091		
Matsui	075					
MEI	027					
Memorex	014	018	022	062	096	
MGA	017	018	022	035	059	064
	092					
Midland	067	134	184	185	194	

Minutz	065					
Mitsubishi	017	018	022	035	059	064
	092	094	102	138		
Montgomery ward	096					
Motorola	016	186				
MTC	017	018	022	027	084	118
	191					
Multitech	051	191				
Multivision	097					
NAD	022	084	198			
NEC	016	017	018	022	098	102
	108	213				
Nikei	055					
Nikko	022	029				
Ntc	029					
Onking	055					
Onwa	051	055				
Optimus	183	198				
Optonica	108	186				
Orion	048					
Panasonic	016	067	075	183		
Philco	016	017	018	021	022	075
	081	082	087	088	090	184
	197					
Philips	016	017	019	021	022	075
	081	082	087	088	089	099
	100	101	102	184		
Pilot	017	184				
Pioneer	017	022	103	104	105	192
	198					
Portland	017	018	022	029	184	
Price Club	118					
Prism	067					
Proscan	013	194				
Proton	017	022	106	184	188	199
Pulsar	134					
Pulser	017					

Quasar	016	067	083	107		
Radio Shack/ Realistic	013	017	022	024	051	054
	055	062	108	168		
	183	184	185	210		
RCA	013	016	017	018	020	022
	109	111	112	113	114	115
	116	142	192	194	200	201
Rhapsody	027					
Runco	134					
Sampo	017	022	184	185	188	
Samsung	017	018	022	024	028	084
	117	118	119	184	185	214
	217					
Samsux	184					
Sanyo	017	026	062	064	120	121
	193					
Scotch	022					
Scott	017	022	037	048	051	055
	059	184				
Sears	013	017	022	026	059	062
	064	079	084	118	122	123
	193	194	202	210		
Sharp	017	022	108	124	125	126
	127	135	184	186		
Shogun	017					
Signature	014	096	128			
Simpson	021					
Sonic	027					
Sony	015	019				
Soundesign	017	021	022	051	055	059
Squareview	202					
SSS	017	051	055			
Starlite	051					
Supremacy	187					
Supreme	015					

Sylvania	017	021	022	075	081	082
	087	088	089	090	101	174
	197					
Symphonic	046	051	202			
Tandy	186					
Tatung	016	191				
Technics	067					
Techwood	017	022	067			
Teknika	017	018	021	022	026	029
	051	055	059	084	089	096
	118	183	184	187		
Telecaption	130					
Telerent	096					
Tera	199					
TMK	017	022				
Toshiba	026	062	084	102	118	122
	130	131	214			
Totevision	184					
Universal	065	100				
Victor	079	195				
Vidtech	017	018	022			
Viking	187					
Wards	013	014	017	018	022	037
	046	059	065	075	081	082
	087	088	089	096	100	101
	108	132	133	197		
Yamaha	017	018	022			
Yupiteru	055					
Zenith	096	134	166			

NOTES

ONE YEAR LIMITED WARRANTY

X10.COM A DIV. OF X10 WIRELESS TECHNOLOGY, INC. (X10) WARRANTS ITS PRODUCTS TO BE FREE FROM DEFECTIVE MATERIAL AND WORKMANSHIP FOR A PERIOD OF ONE (1) YEAR FROM THE ORIGINAL DATE OF PURCHASE AT RETAIL. X10 AGREES TO REPAIR OR REPLACE, AT ITS SOLE DISCRETION, A DEFECTIVE X10 PRODUCT IF RETURNED TO X10 WITHIN THE WARRANTY PERIOD AND WITH PROOF OF PURCHASE.

IF SERVICE IS REQUIRED UNDER THIS WARRANTY:

1. CALL 1-800-675-3044, OR VISIT WWW.X10.COM, OR E-MAIL SALES@X10.COM TO OBTAIN A RETURN MERCHANDISE AUTHORIZATION (RMA) NUMBER.
2. RETURN THE DEFECTIVE UNIT POSTAGE PREPAID TO THE ADDRESS ON BACK.
3. ENCLOSE A CHECK FOR \$4.00 TO COVER HANDLING AND RETURN POSTAGE.
4. ENCLOSE A DATED PROOF OF PURCHASE.
5. X10 IS NOT RESPONSIBLE FOR SHIPPING DAMAGE. UNITS TO BE RETURNED SHOULD BE PACKED CAREFULLY.

THIS WARRANTY DOES NOT EXTEND TO ANY X10 PRODUCTS WHICH HAVE BEEN SUBJECT TO MISUSE, NEGLIGENCE, ACCIDENT, INCORRECT WIRING OR TO USE IN VIOLATION OF OPERATING INSTRUCTIONS FURNISHED BY US, NOR EXTEND TO ANY UNITS ALTERED OR REPAIRED FOR WARRANTY DEFECT BY ANYONE OTHER THAN X10. THIS WARRANTY DOES NOT COVER ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES AND IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED AND NO REPRESENTATIVE OR PERSON IS AUTHORIZED TO ASSUME FOR US ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF OUR PRODUCTS.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, AND/OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO THE ORIGINAL CUSTOMER. THIS WARRANTY GIVES YOU SPECIFIC RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

If you have any questions concerning warranty or installation, please call 1-800-675-3044, e-mail sales@x10.com, or visit www.x10.com/warranty for on-line warranty registration.



**X10.com, a division of
X10 Wireless Technology, Inc.
(Returns Depot),
3824 North 5th St., Suite C,
North Las Vegas, NV 89030
www.x10.com/support**

BBR-9/01

